




### Spare Parts – BR-22 PLUS

1	UWBR22A01	Replacement handle set with screws and O-ring
2	UWBR22A03	Head and cable assembly
3	UWBR22A04	Collet Nut Assembly
4	UWBR22A05	Flash arrestor assembly
5	UWBR22A06	Check valve assembly
6	UWBR22A07	Coupler hose assembly
7	UWBR22A08	Control valve assembly
8	UWBR22A09	Valve lever with screw and nut
9	UWBR22N123	Dash 123 Neoprene O-ring nut to handle seal
10	UWBR22R02K	Replacement handle screw set with nuts
11	UWBR22R08K	Control valve repair kit (O-rings, valve stem, valve nut, and return spring)
12	UWBR22C38K	3/8" collet and washer kit
12	UWBR22C14K	1/4" collet and washer kit
12	UWBR22C18K	1/8" collet and washer kit
12	UWBR22C316K	3/16" collet and washer kit
12	UWBR22C516K	5/16" collet and washer kit
12	UWBR22C532K	5/32" collet and washer kit
13	UWBR22W38	Silicone rubber collet washer for 3/8" collet
13	UWBR22W14	Silicone rubber collet washer for 1/4" collet
13	UWBR22W516	Silicone rubber collet washer for 5/16" collet
13	UWBR22W00	Silicone rubber collet washer for welding collets